

To set the time for your UX5000/Aspire system:

From main extension

1. From the System Administrator's telephone (normally extension 301), press CALL1 and dial 828.
2. Dial two digits for the hour (24 hour)  
For example, 13=1:00 PM.
3. Dial two digits for the minutes.  
You hear confirmation beeps.
4. Press SPK to hang up.